

PLUMBERS INSTALLATION INSTRUCTIONS

Important

- * Handset (1) is fitted with flow regulator (2). This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
Note: Warranty is void if flow regulator (2) and check valves (3) are not installed as shown.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that the flow regulator (2), check valves (3) are fitted into handset (1) and the rubber washer (4) is fitted into the longer conical end (5) of shower hose (6), then screw onto handset (1) and tighten.

Note: The Handshower spray can be adjusted by rotating the lever on handset (1).

HANDSHOWER - FIVE FUNCTIONS

CONCENTRATE SPRAY

(INNER HOLES)

GRANULAR SPRAY

(INTERMEDIATE HOLES)

FULL SPRAY

(OUTER HOLES)

FULL SPRAY+GRANULAR SPRAY

(INTERMEDIATE + OUTER HOLES)

FULL SPRAY+CONCENTRATE SPRAY (INNER + OUTER HOLES)

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 - 1000 kPa
New Regulation :-500 kPa maximum static pressure at any outlet within a building.(Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 70°C.

Installation Requirements.

- The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant.(Ref AS3740)

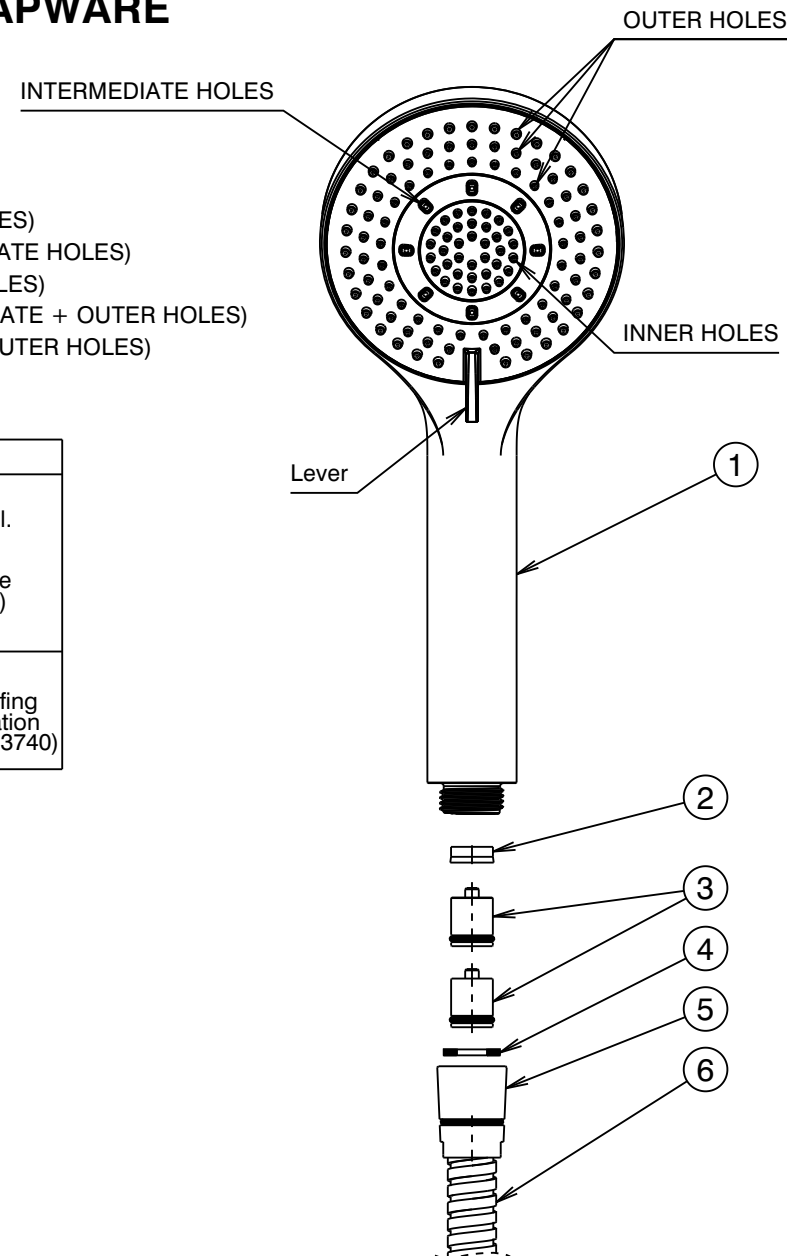


Fig. 1