




D1200 Door Closer STANDARD INSTALLATION

Precautions:

1. Install the door closer according to the specification of installation diagram.
Meanwhile make sure that all the screws are fastened.
2. The valves are prohibited to screw out of the door closer, while adjusting the closing and latching speed.
3. When closing the door, no additional forces by hand, if not maybe the door closer will be failure.
4. If do not follow this installation, the company is not responsible for the consequences caused.
5. Max opening angle is 180°.


Door closer strength selection	
Strength specification	Usable door weight(kg)
Power EN3	40~60
Power EN4	60~80

Drill and screw selection		
Door types	Metal door	Wooden door
Drill	φ4.2	φ3.8
screw	M5 	ST4.8 

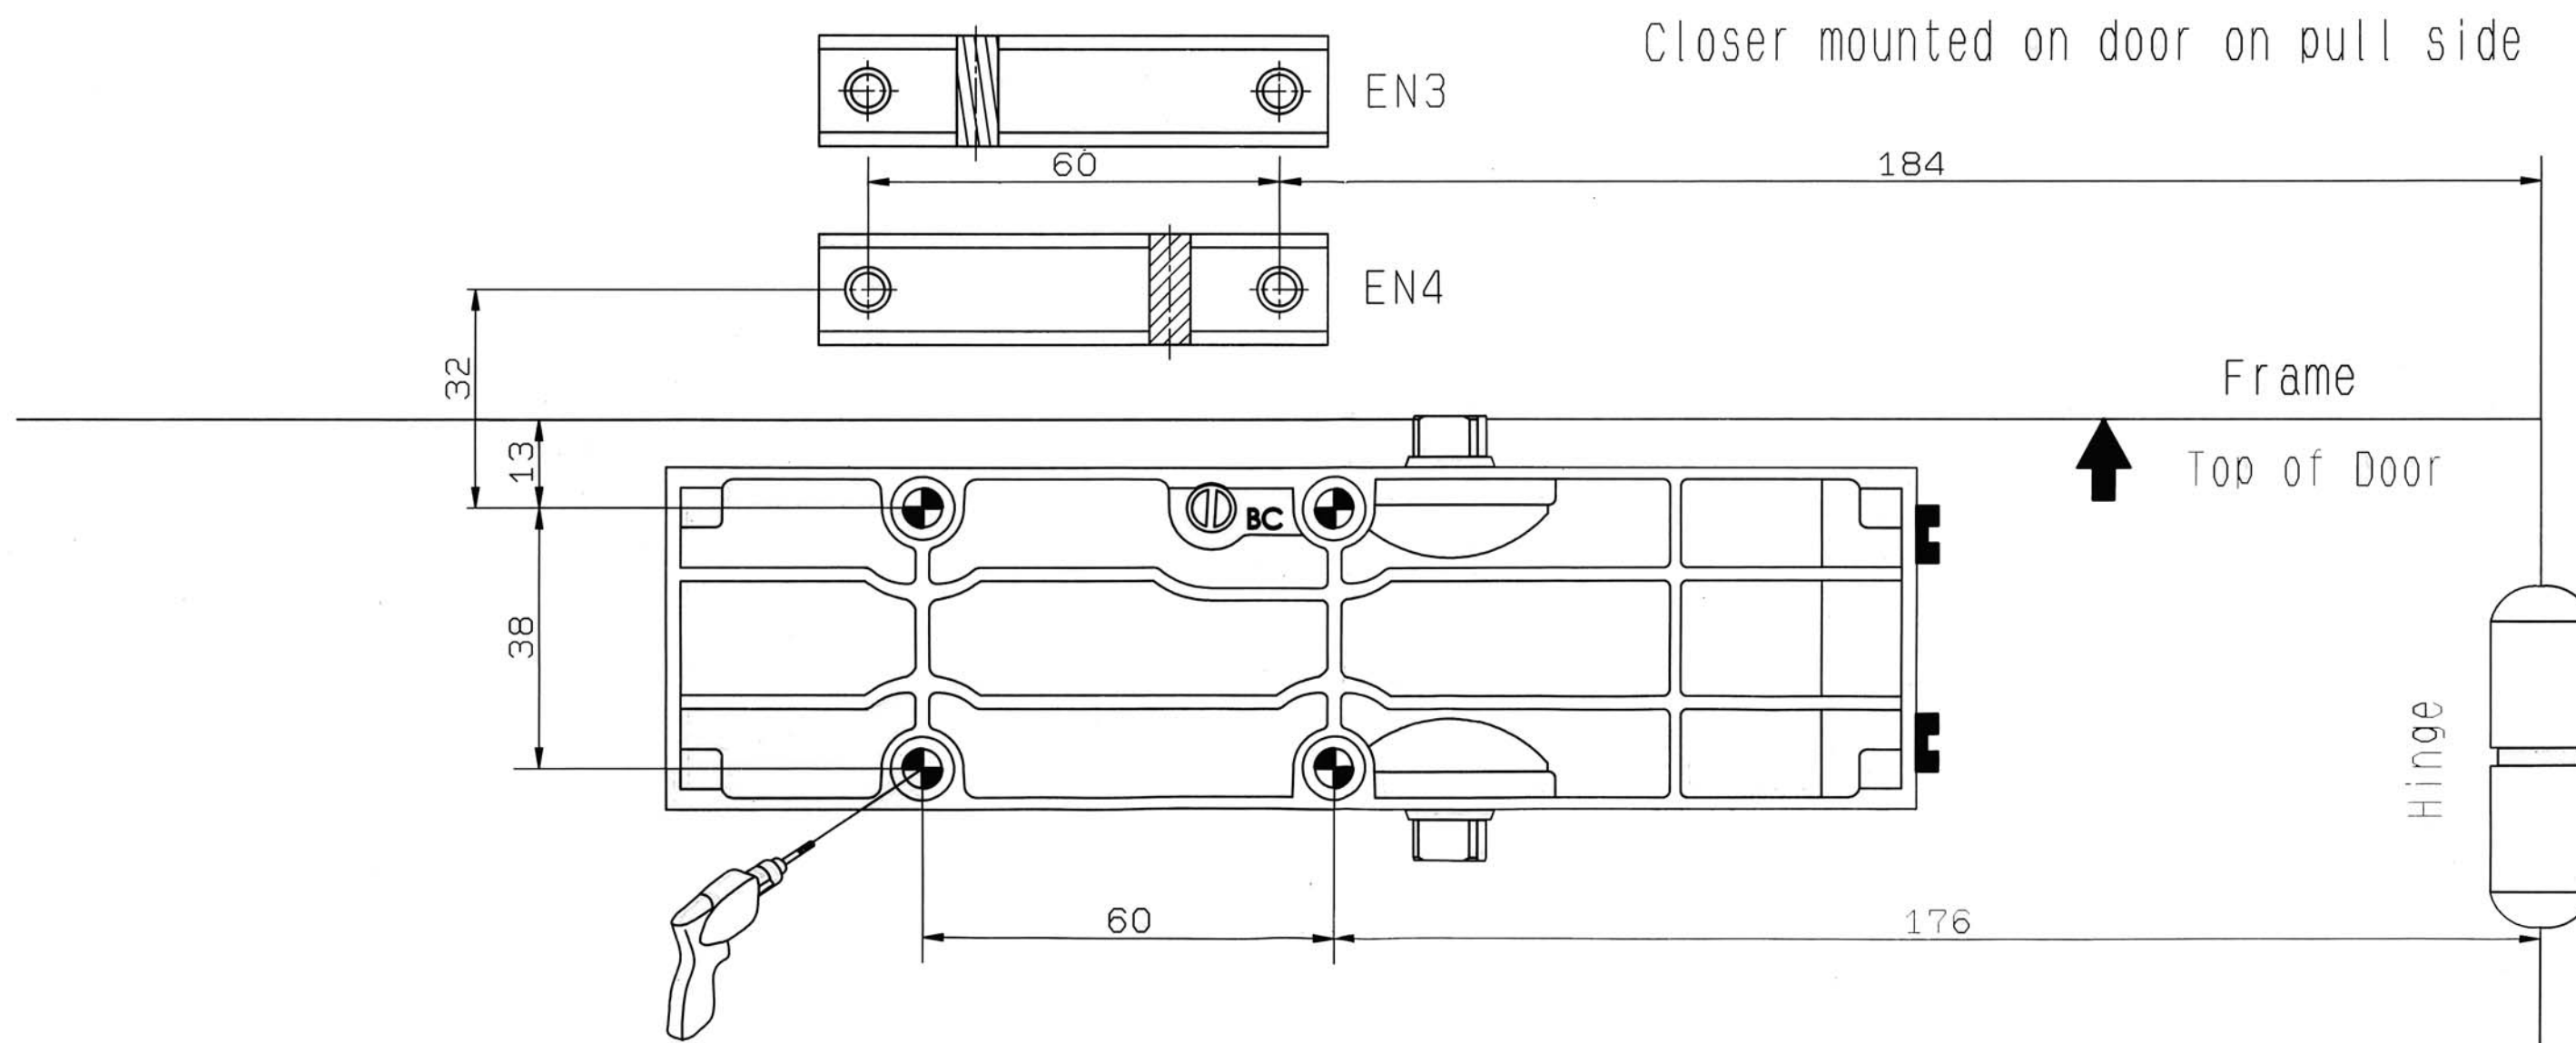


TOP JAMB INSTALLATION

Closer mounted on top jamb on push side of door.

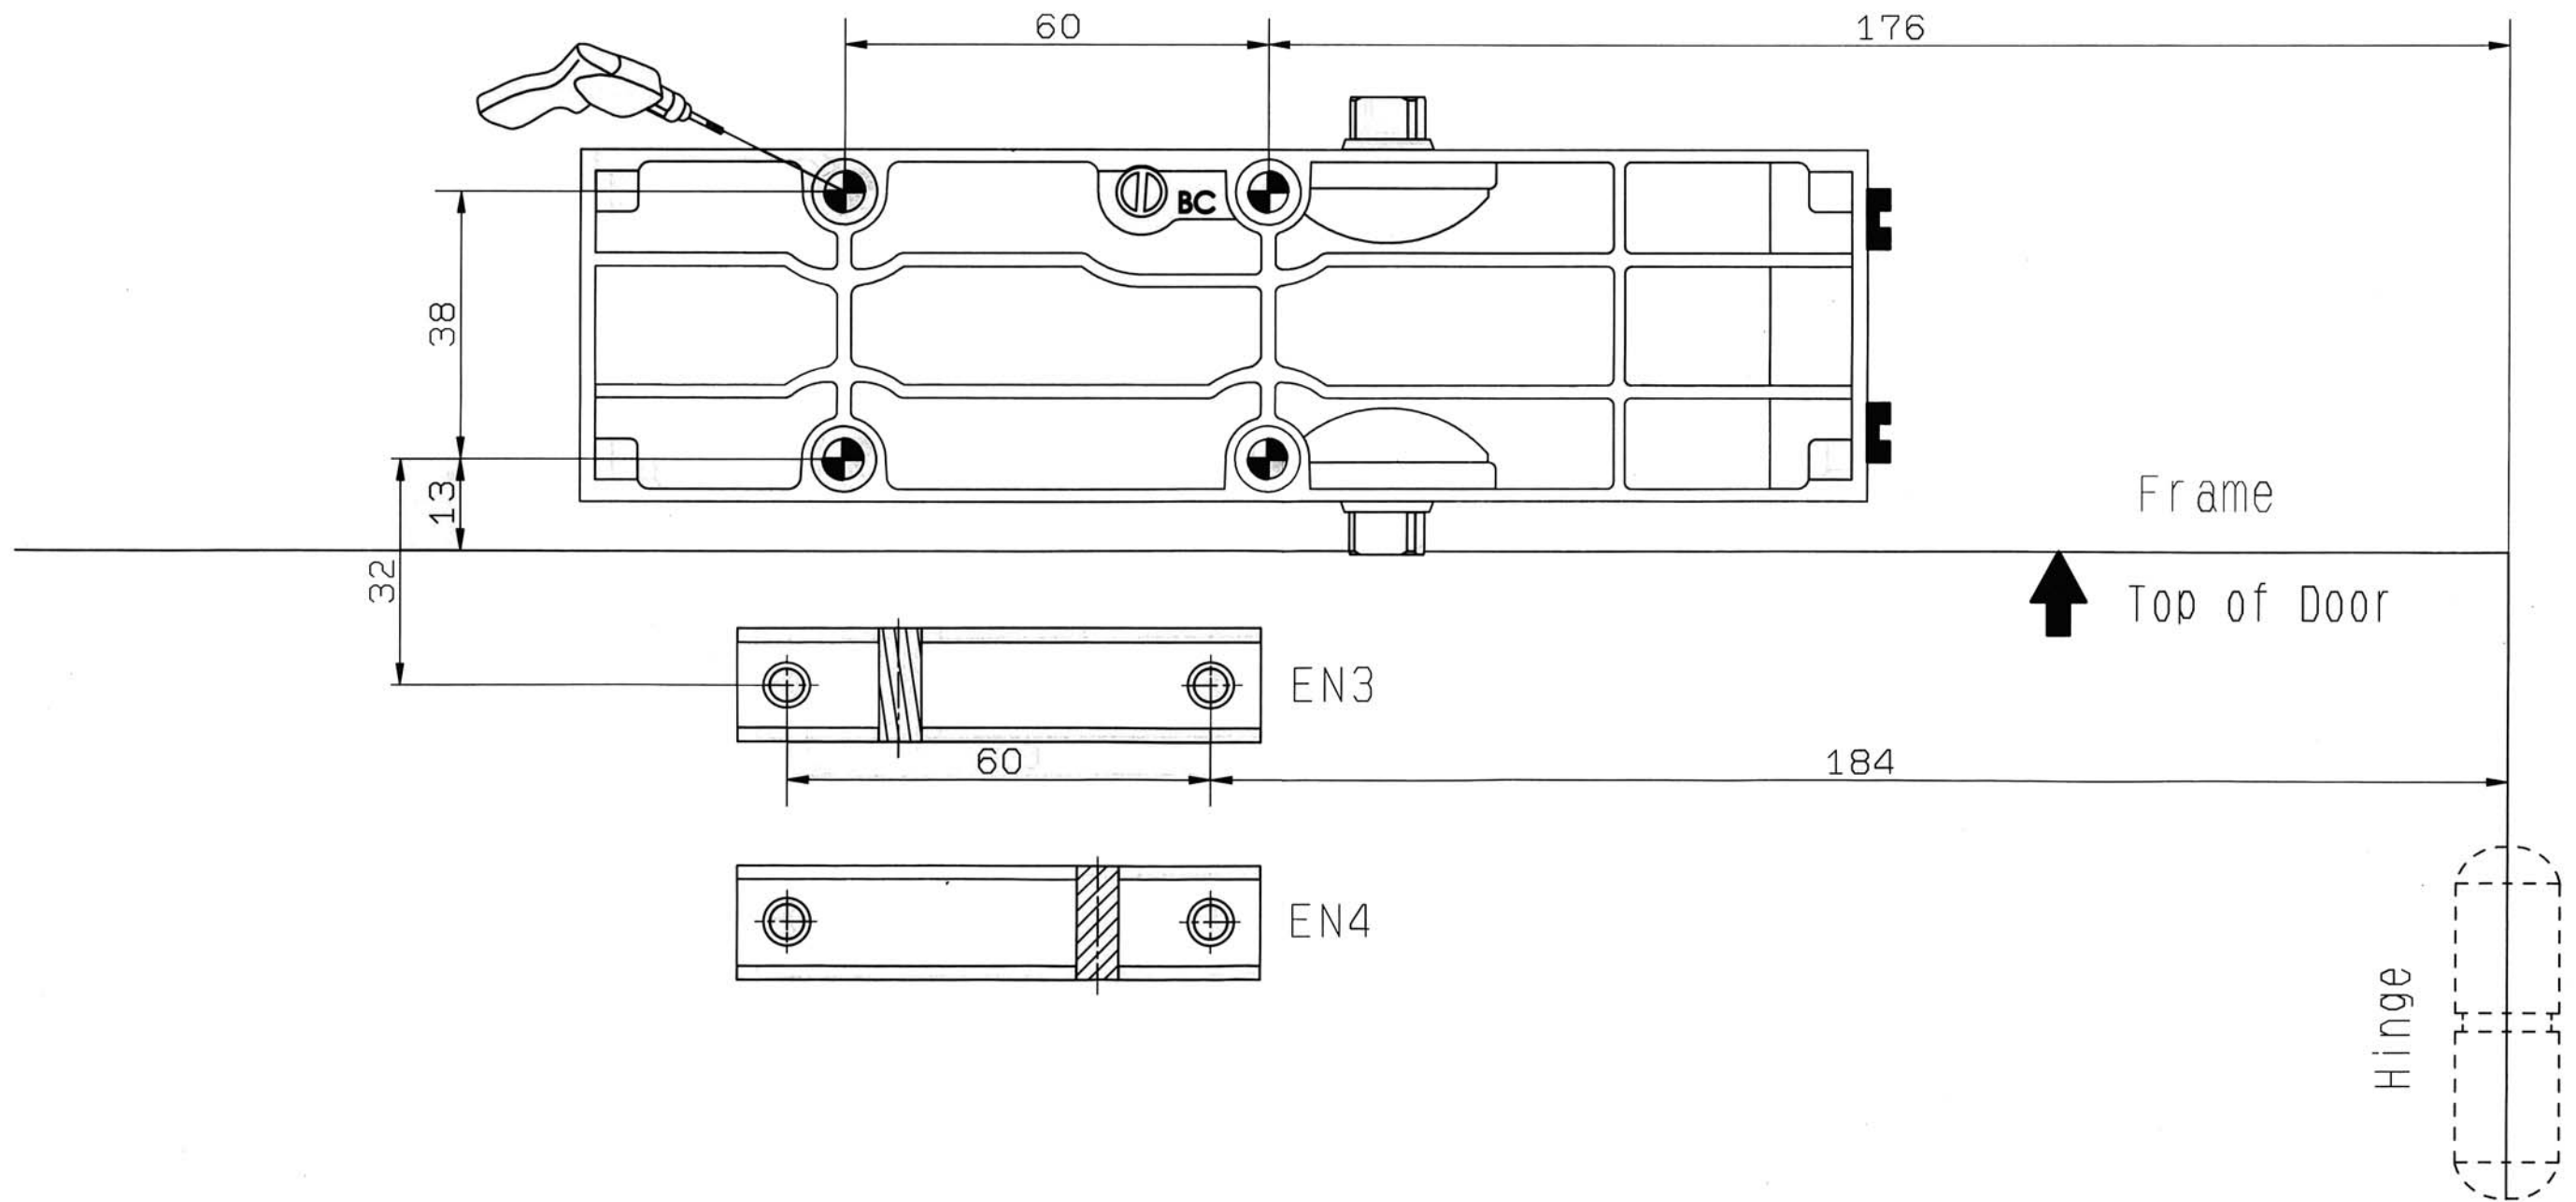


①

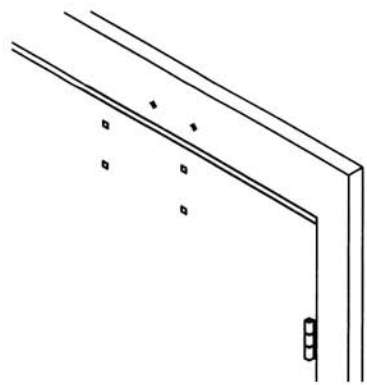


mark holes for closer body
and arm shoe bracket hole

②

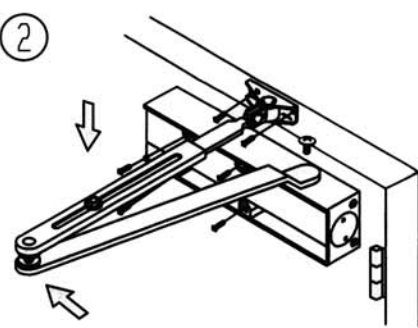


Place arm pivot bracket assembly
into position and fix closer body
to the marked holes.

③

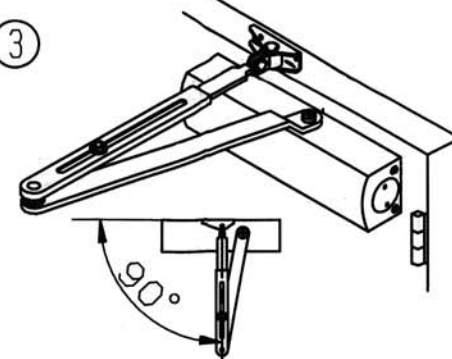


1. Adjust forearm length so that it will be
perpendicular (at a 90°) to the door face.
2. The forearm and main arm are connected
with the gasket and screws;

④

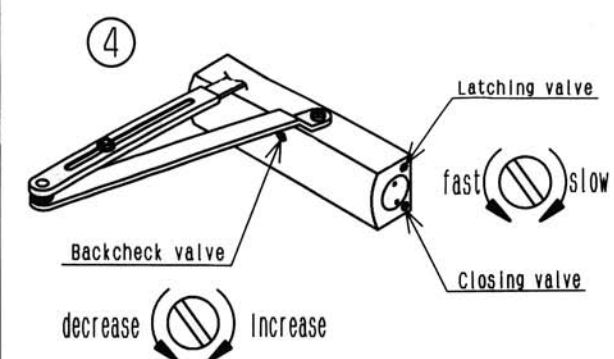

Adjust closing valve and latching valve
and backcheck valve

⑤

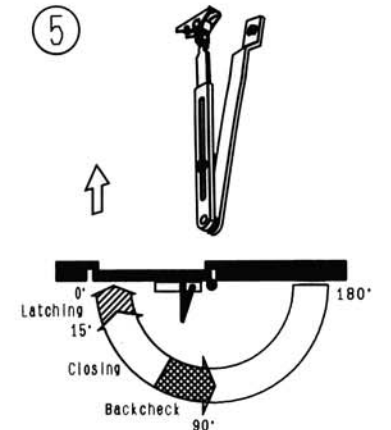

speed control