

mīstral

Mini Power Scrubber



Instruction Manual

Model: BSB290

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children must be supervised to ensure that they do not play with the appliance and/or USB cable.
- Do not use it on people or pets etc.
- Do not disassemble the appliance and/or USB cable. There are no user serviceable parts inside.
- Only charge the appliance with the USB cable that was supplied with the appliance.
- Only charge the appliance from an extra low voltage battery charger (not supplied) with an output rating the same as indicated on the appliance's rating label.
- Position the USB cable properly so that it will not be walked on or pinched by items placed on or against it.
- Use the appliance and USB cable only for its intended use. The appliance and USB cable are intended for household use only and not for commercial or industrial use.
- Inspect the USB cable and appliance for damage prior to every use.
- Do not use the appliance if it has been dropped or any part of the appliance and/or the USB cable has been damaged.
- If the USB cable is damaged, call our customer service for a replacement.
- Ensure that the Scrubber and/or USB cable does not get wet (water splashes etc.).
- Do not immerse the appliance and/or the USB cable in water or other liquids.
- Do not place the appliance on other electrical devices, on uneven surfaces or where it could

be subject to heat sources (e.g., radiators or stoves), direct sunlight, excessive dust, or mechanical vibrations.

- The appliance and/or USB cable must not be used outdoors if raining, placed near a hot gas or electrical burner or placed in a heated oven.
- Always switch off and unplug the charger (not supplied) when finished charging the appliance, or during lightning storms or when unused for long periods of time.
- Do not cover the appliance or charger when charging or when in use.
- Do not insert or allow foreign objects to enter the charging port as this may cause damage to the Appliance and/or injury to the user.
- ONLY for domestic use. Industrial or commercial use invalidates the warranty.

Warning

Only use the USB cable that was supplied with this appliance.




At the end of the appliance's life, it must be disposed of correctly. This appliance contains a battery that is non-replaceable, and as the battery is non-replaceable, the complete appliance must be recycled as this is where the battery is located. Contact your local waste management authority for more information on Battery Recycling and disposal regulations in your area.



This symbol on the product or its packaging indicates: Do not dispose of electrical appliances or batteries as unsorted municipal waste, use separate collection facilities. Contact your local council for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. Please contact your local council or regional authority for more information on collection, reuse, and recycling programmes.

Save These Instructions

Features of Your Mini Power Scrubber

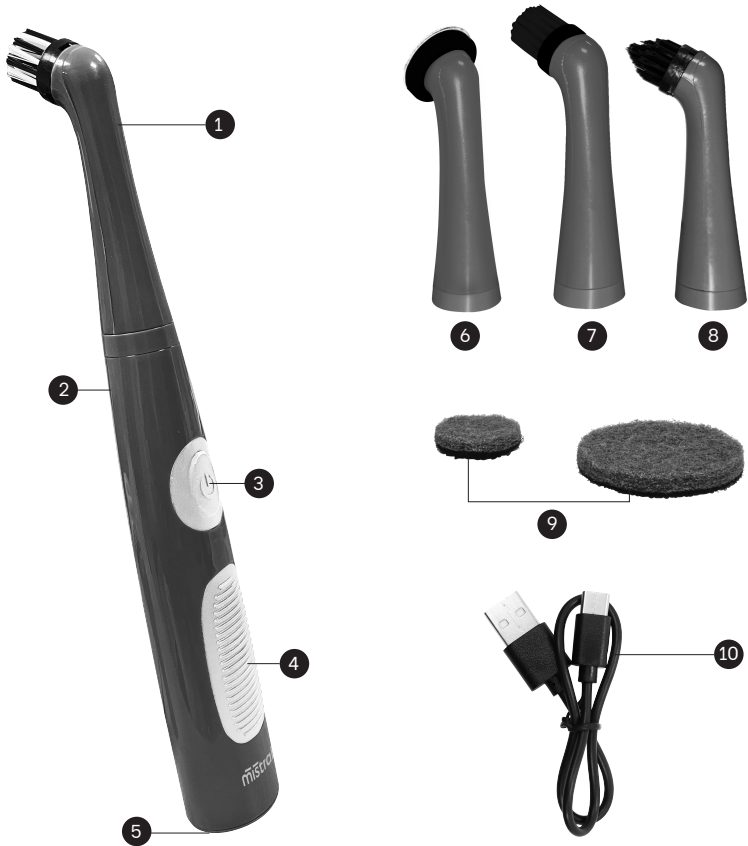

- 1. Hard Brush
- 2. Scrubber Unit
- 3. Power Switch Button
- 4. Non-Slip Grip Handle
- 5. Charging Socket
- 6. Pad Brush Coupling (with Velcro attached)

- 7. Soft Brush
- 8. Corner Brush
- 9. Scouring Pad Brush (big and small size)
- 10. USB Charging Cable

Getting to Know Your Mini Power Scrubber

Congratulations on the purchase of your new Mini Power Scrubber.

Before using this appliance, it is important that you read and follow the instructions in this booklet, even if you feel that you are quite familiar with this appliance. Find a place to keep this booklet handy for future reference.

Your attention is drawn to the section dealing with “Important Safeguards.”

Before First Use


Charging the Appliance

This appliance contains a built-in lithium-ion battery which must only be charged using the supplied USB cable. Never leave the appliance unattended when charging.

NOTE: The appliance must be fully charged prior to first use.

If any abnormality occurs during charging, (such as a burning smell or excessive heat or even a strange sound) immediately turn off the charger and disconnect the USB cable, then contact our service department for assistance.

First, pull up the circular protective cover over the charging socket at the bottom of the appliance and rotate the cover to the right to reveal the USB charging port.

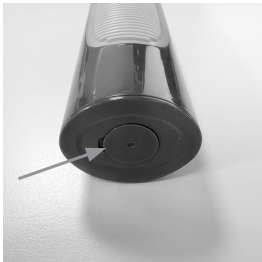

Note: Please gently pull up the circular protective cover; forceful removal may cause damage to the equipment.

Second, fully straighten out the USB cable and then plug the small end (USB-C) of the USB cable into the slot to the end.


Third, Plug the large end of the USB cable into a DC 5V/1A charger, then switch on the charger. The indicator light on the grip handle will be Red to indicate that the device is charging.

When fully charged, the indicator light will turn Green, remove the USB charging cable and turn off & unplug the charger.

Note: DO NOT keep the unit charging when the battery is full. To ensure optimal performance and battery life, please recharge the battery every 2 months if the device is not in regular use.

How to Install and Remove the Brushes

To install the brush, align the slot on the scrubber unit joint and push the brush to the unit, then turn the brush clockwise until the brush head is opposite to the switch.

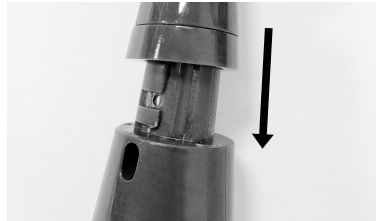

To remove the brush, rotate the brush counterclockwise and then pull it out.

Note: The scouring pad brush must be used in conjunction with the pad brush coupling (with Velcro attached).

How to Use Your Mini Power Scrubber

Operation

1. Ensuring the appliance is fully charged, the USB cable has been removed, and the circular protective cover is inserted sealing the USB charging socket.
2. The appliance is suitable for use with several types of cleaning agents such as Bathroom / Kitchen surface sprays, foams, gels, liquids, and bleaches.
3. Select the appropriate brush according to the cleaning requirements and install it onto the main unit.
4. Press the power switch button to turn it on. The scrubbing brush will start vibrating. Apply the vibrating cleaning head to the surface and with a gentle downward pressure and motion, move the appliance around to scrub the surface.

Warning: Do Not apply too much downward pressure as the motor will detect the excessive pressure and will turn off.

5. Press the button a second time to activate Turbo (high-speed) mode. Press it a third time to turn the appliance off.

Warning: Always turn the appliance off before lifting it from the surface to prevent splashing.

Care and Cleaning

1. Ensure that the appliance is switched off, unplugged from the charger and the rubber plug is inserted sealing the USB charging socket.
2. Never stick anything inside the appliances charging port. Only clean the outside.
3. Remove the cleaning head, clean the appliance body with a damp cloth and to completely dry.
4. Clean the brush heads in hot soapy water and then let them completely dry.
5. Do not place these parts in a dishwasher or clothes dryer.
6. Never submerge the appliance or USB cable in water or any other liquid.
7. Do not use flammable liquids, chemicals, abrasive creams, steel wool or scouring pads for cleaning.
8. Coil the USB cable loosely. Do not kink or pull the cable tight.
9. Store the appliance safely and in a cool and dry place.

Troubleshooting

Please read the table below carefully before contacting the service centre. This may help resolve common issues and avoid unnecessary costs.

Fault	Possible Reasons	Measures
Brush not vibrating.	<ol style="list-style-type: none"> 1. Low battery 2. Brush not fitted properly 3. Brush is a consumable part. It reaches its end of life. 	<ol style="list-style-type: none"> 1. Charge the scrubber fully. 2. Reinstall the brush until it fitted into place. 3. Contact customer service for spare parts.
Unable to charge	<ol style="list-style-type: none"> 1. USB cable damaged 2. Charging port blocked or dirty. 3. Battery faulty 4. Charger not working. 	<ol style="list-style-type: none"> 1. Use the original USB cable or replace with a certified one. 2. Gently clean the charging port with dry cloth. 3. Contact customer service for battery inspection. 4. Try another compatible 5V/1A charger.
Scrubber is noisier when operating in Turbo mode	Increased noise is normal when the scrubber is running at higher speed.	This is normal operation and not a product fault. No action is required.

Technical Specification

Charging Voltage:DC 5V/1A
 Full Charging Time:Approximately 4 h
 Waterproof Level:IPX5
 Battery:DC 3.7V 1200mAh Li-ion battery

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

Warranty Conditions for purchase in Australia & New Zealand

Any claim under this warranty must be made within 1 year of the date of purchase of the product. To make a claim under the warranty in Australia, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au in Australia or www.bunnings.co.nz in New Zealand for store locations).

GSM Retail Group bears reasonable, direct, expenses of claiming under the warranty in Australia. You may submit details and proof to a Bunnings store for consideration or contact our service agent below.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law (if purchased in Australia) or the Consumer Guarantees Act 1993 (if purchased in New Zealand). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by GSM Retail Group

ABN: 53007682475

For Warranty and technical queries: 1300 373 199 Aus Or 0800 764 912 NZ

Warranty Exclusions

Damage to the base or diffuser or any part through accident, misuse or negligence.

G | S | M

Gerard Sourcing & Manufacturing

GSM Retail Group

Consumer Service Centre :

Aus: 1300 373 199

NZ: 0800 764 912

GSM Retail Group has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Group
Mistral is a registered trademark of GSM Retail Group
142-144 Fullarton Road, Rose Park, SA 5067



Cat. No. BSB290
January 2026