

mīstral

1500W Steam Mop



Instruction Manual

Model: BSMO575

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety. Supervision must ensure that the user has been instructed on the safe operation of the appliance and understands all associated risks.
- Children shall not use the appliance for play. Close supervision is necessary if children are near the appliance during or after its operation.
- Always operate the appliance on a stable, level, and heat-resistant surface.
- Close supervision is necessary when any appliance is used by or near children or pets.
- Do not leave the appliance unattended while it is operation.
- Do not immerse the cords, plugs or any part of the appliance in water or any other liquid.
- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- Cleaning and user maintenance shall not be carried out by children without adult supervision.
- Switch off the wall socket then remove the plug from the socket when not in use or before cleaning.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer or its service agent or similarly qualified person.
- Do not allow the power cord to hang over the edge of a table or counter, or come into contact with hot surfaces, sharp objects, or moving parts.
- Only use accessory attachments provided by the appliance manufacturer. The use of non-approved accessories is not recommended.
- Do not use extension cord with the appliance.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Do not use the product for anything other than its intended use.
- This appliance is for household use only.
- Do not carry the appliance with the power cord.
- Do not use the appliance outdoors.
- Never direct steam towards people, animals or plants. There is hot steam.
- Do not use in swimming pools or floor containing water.
- Do not handle the plug or the steam mop with wet hand or operate without shoes.
- Do not insert objects into any openings of the appliance. Keep all openings, including the steam nozzle, clear of blockages.
- Do not use the mop head without floor cloth or without water in the water tank.
- Do not fill with hot water or chemicals in the water tank.
- Use extra caution when using on stairs as the cable can become a trip hazard.
- The liquid or steam should not be directed towards electrical equipment.
- Do not use the steam mop if water leakage is observed and contact a qualified electrician to test and repair the appliance.
- Do not use the steam mop in enclosed spaces that are filled with flammable, or explosive or toxic vapours.
- Do not use on heat sensitive materials e.g. leather, or waxed flooring.
- Do not use for space heating purpose.
- Do not touch hot surfaces with the cable or the product. Always allow the unit to cool completely before assembling or disassembling any parts.

- The steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- Always unplug the appliance after use, before dismantling or assembling parts and performing any user maintenance or cleaning operations. Also unplug it in the case of a power cut. When plugging in or unplugging the appliance, it must always be turned off.
- Keep the appliance out of reach of children when it is energized or cooling down.
- Do not use the appliance if it has been dropped, shows visible signs of damage, or is leaking.

Warning

If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.



CAUTION: HOT STEAM! Be careful of scalding due to high temperature steam.

Save These Instructions

Features of Your 1500W Steam Mop



- A. Handle
- B. Up Cord Wrap
- C. Tube
- D. Down Cord Wrap
- E. Tube Release Button
- F. Power Cord
- G. Power Switch
- H. Watertank
- I. Power Indicator light
- J. Triangle Head Release Button
- K. Triangle Head
- L. Carpet Glider
- M. Microfibre Cloths (2pcs)
- O. Cup
- P. Funnel

Getting to Know Your Steam Mop

Congratulations on the purchase of your new Steam Mop.

Before using this product for the first time. It is extremely important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.


Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.


Before First Use

How to assemble your Steam Mop


When assembling the handle with the main body, align the hole on the handle with the tube release button on the main body.

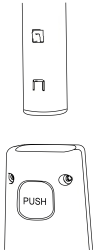

Push the handle firmly into the body until it clicks and is fully seated. Confirm it is secure by giving the handle a gentle tug.

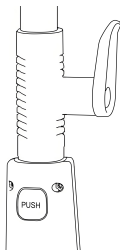


Remove the handle by pressing spring loaded button(behind the body) with thumb and at the same time pull handle to disconnect handle from the body.

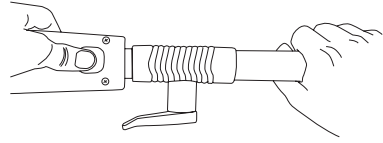


Assemble the Steam Head (Triangle) to mop body

Put the triangle mop head on the floor and make the body aligned with the locking tab, ensure push into place until it clicks.

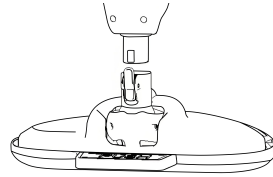

Warning: Never force the steam mop body onto the triangle mop head, as this could potentially damage the steam mop. Always attach the triangle mop head using both hands, ensuring it locks into place correctly.

To remove the triangle mop head, press the triangle head release button on the mop and pull the body back to detach.

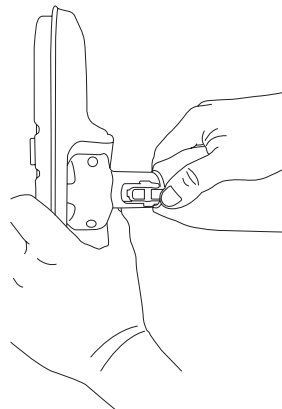

Fitting the Microfibre Cloth

When fitting the microfibre cloth, align and firmly press the loop (soft) side of the microfibre cloth onto the triangular mop head, ensuring full contact with the hook (rough) surface on the head.



NOTE: Microfibre Cloth is washable.


Fitting the Carpet Glider

To use your steam mop on carpets, first ensure the microfibre cloth is inserted into the triangle head. Then, attach the triangle head assembly firmly onto the Carpet Glider.



Removing the Carpet Glider

Remove the carpet glide, press down on the PUSH button with your foot, and lift the steam mop body upwards until the glide is completely detached from the triangle head.

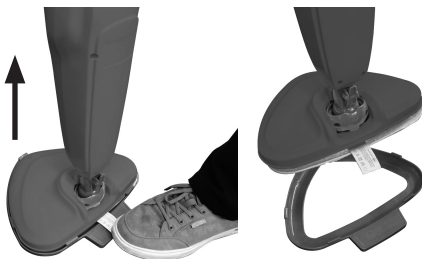


Filling the Steam Mop

Important: Always ensure that the appliance is disconnected from the wall power socket prior to filling and before fitting the bottom of the mop head.

Never use the steam mop without the microfibre cleaning cloth securely in place.

Filling the Water Tank

Open the cap of the water tank and then using the filling cup and funnel, pour one cup of water into the water tank. Do not overfill the tank. (Max. 350ml capacity of water tank).

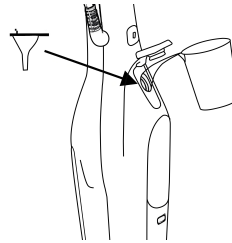

Note: Always use the supplied funnel for filling. Its filter helps prevent tank clogging by removing particles from the water.

After filling the water tank, close the water tank cover and plug the appliance into the power outlet. Then press the power switch, the power indicator light located on the front of the body will be light. It means the steam mop is ready to emit steam. After about 30 seconds, the steam mop will start releasing steam.

To turn off the steam mop, press the power switch again.

Note: Never place de-scaling, aromatic, alcoholic or detergent products in the steam mop tank, this will cause damage to the appliance.

When turning on the power switch, the water pump may temporarily operate with low water, during which it may produce slightly more noise than during normal operation. Please rest assured that this is normal.

How to Use Your Steam Mop

IMPORTANT: Never use the steam mop without the microfibre cleaning cloth attached to the mop head or without water in the water tank.

Steam Mop

Note: Sweep or vacuum all floor surfaces first to remove dust before using steam mop.

1. Pull and twist the quick release cord holder and unwrap the power cord completely.
2. Plug the appliance to the mains outlet socket, turn on power switch of your steam mop. The steam will start to release after about 30 seconds, and steam will wet the microfibre cloth on the steam mop head.

Note: It is normal for appliance to make noise and vibrate when water pump is operating.

3. To sanitize an area of your floor, leave the Steam mop over area for a minimum of 8 seconds, but no longer than 15 seconds. Leaving the Steam mop in a stationary position for a longer period than recommended may cause the build up of a pale residue. This residue can be removed by using a decalcifying product or with a few drops of vinegar. (See troubleshooting guide).
4. When the water tank is empty, a noise will come from the pump, and it will vibrate. Switch off the steam mop immediately and refill the water tank following the instructions under the 'Filling the steam mop' section.
5. When you have finished using the steam mop, turn off the appliance and unplug it. Once the product has completely cooled down, remove the accessory.

Note: If you find that the microfibre cloth is dirty during the cleaning process and needs to be cleaned, you should turn off the power, unplug the appliance, and wait for the mop head to cool to room temperature. Once cooled, remove the cloth for cleaning. Afterward, follow the previous steps to assemble it and continue the cleaning process.

6. Never leave the microfibre cleaning cloth on the steam mop head when you have finished using the steam mop; as the dirt deposits and other foreign objects may cause unpleasant odours and in some cases may damage the surface it is resting on.
7. For the best results, wash the cloth after each use and replace it with clean one.

Care and Cleaning

Ensure the appliance is unplugged from the mains supply and has cooled sufficiently before cleaning.

Drain any remaining water from the tank and clean after every use.

Clean the accessories in warm, soapy water and leave to dry.

Decalcify the Water Tank Interior

Removing Limescale

If the appliance begins to produce steam more slowly than usual or stops producing steam, you may need to remove limescale.

Limescale can develop over time on the metal parts of the appliance and greatly affect its performance. It is recommended to remove limescale on a moment basis or after every 25-50 uses.

The frequency of removal depends on the hardness of your tap water and how often you use your steamer. If you live in an especially hard water area, you may need to use de-mineralised water.

Using a Cleaning Solution

Prepare a solution of 1/3 white vinegar and 2/3 tap water and add to the water tank. Secure and position the unit to ensure any steam released is aimed away from the floor or surrounding objects and surfaces.

Plug the appliance into the mains power supply and turn on; allow the unit to produce steam until all the solutions are used.

Repeat the above procedures as often as necessary then fill the tank with fresh water and rinse.

Fill the tank to the max. level with fresh water, switch on and release steam through the system until the water tank is empty.

Warning: Do not leave the steamer unattached during the limescale removal process and/or during use.

Note: Perform a test on a suitable isolated surface after limescale removal to ensure there is no debris left in the unit.

Cleaning Blocked Steam Nozzle

Due to the high mineral water content in certain areas, you may notice less steam from the accessories; this may be caused by calcium build-up. Follow the instructions below for cleaning:

Cleaning Calcium buildup

It is recommended to use the vinegar solution inside the affected accessory then fill the water tank with water according to the directions and run a continuous jet of steam through the affected accessory for several minutes to clear the pathway.

Aim the appliance at a neutral surface or cleaning cloth to ensure debris is emitted.

Cleaning the Microfibre Cloths

The microfibre cloths are machine washable on a warm setting; always use a mild detergent. For best results, lay flat to dry.

Note: Never use bleach or fabric softener when cleaning the microfibre cloths.

Storage

After use, turn the appliance off and unplug from the mains power supply.

Drain any residual water from the tank, or ensure the tank is completely emptied during use of the steam mop. Always clean the outer surface with dry cloth.

Remove and wash the microfibre cloths.

Store the appliance in a dry area away from children.

Troubleshooting

Problem	Possible Solution
Power Indicator Light is not on.	Ensure the Steam mop power cord is correctly plugged on.
	Ensure circuit breaker is operational. Try operating the Steam mop from another power outlet.
The Steam mop will not release steam	Ensure the water tank is filled with water and located properly.
Pale residue left on the floor.	Caused by leaving the Steam mop in the same position for too long time. It can be removed with household white vinegar or a decalcifying product.
	Alternatively reheat the area for one minute and residue should be removed.
	CAUTION: DO NOT PUT IT IN OVERHEAT AREA.

Specifications

Rated Voltage:220-240V~ 50Hz
 Power:.....1500W
 Waterproof Level:..... IPX4
 Water tank capacity:Max. 350ml

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly from the unit illustrated on the packaging.

Notes

Warranty Conditions for purchase in Australia & New Zealand

Any claim under this warranty must be made within 2 years of the date of purchase of the product. To make a claim under the warranty in Australia, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au in Australia or www.bunnings.co.nz in New Zealand for store locations).

GSM Retail Group bears reasonable, direct, expenses of claiming under the warranty in Australia. You may submit details and proof to a Bunnings store for consideration or contact our service agent below.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law (if purchased in Australia) or the Consumer Guarantees Act 1993 (if purchased in New Zealand). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by GSM Retail Group

ABN: 53007682475

For Warranty and technical queries: 1300 373 199 Aus Or 0800 764 912 NZ

Warranty Exclusions

Damage to the base or diffuser or any part through accident, misuse or negligence.

G | S | M

Gerard Sourcing & Manufacturing

GSM Retail Group

Consumer Service Centre :

Aus: 1300 373 199

NZ: 0800 764 912

GSM Retail Group has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Group
Mistral is a registered trademark of GSM Retail Group
142-144 Fullarton Road, Rose Park, SA 5067



Cat. No. BSM0575
December 2025