

mīstral

7.4V Compact Cordless HandVac



Instruction Manual

Model: BVC302

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- Do not operate the appliance when charging.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors or on wet surfaces. Misuse may cause injury.
- Do not allow this appliance to be used as a toy. Close attention is necessary when used nearby children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not charge with a damaged charging cable. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, take it to a service center for inspection or repair.
- Do not pull or carry on the charging cable, use the cable as a handle, close door on the cable, or pull the cable around sharp edges or corners. Keep the cable away from heated surfaces.
- Do not unplug the charging cable by pulling on the cable. To unplug, grasp the plug, not the cable.
- Do not handle plug or the appliance with wet hands.

- Do not immerse the appliance and the charging cable in water or any other liquid.
- Do not put any object into openings. Do not use with any opening blocked. Keep free of dust, lint, hair and anything that may reduce airflow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up any flammable or combustible materials (lighter fluid, petrol, kerosene etc.) or use in the presence of explosive liquids or vapours.
- Do not vacuum harmful or toxic material (chlorine, bleach, ammonia, drain cleaner etc.).
- Do not vacuum any liquid, including water.
- Do not vacuum sharp or pointed objects such as glass, nails, or pins.
- Store the appliance in a cool, dry area.

Warning






Always turn the power switch to OFF and unplug the USB charging cable from the appliance before assembling, opening or emptying the dirt container, or connecting/disconnecting attachments.

IMPORTANT: If the airflow is blocked, switch off the appliance and remove the blockage before re-starting the appliance.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your 7.4V Compact Cordless HandVac

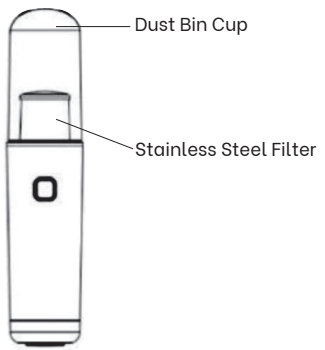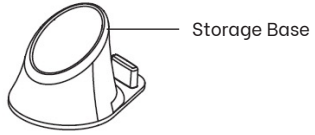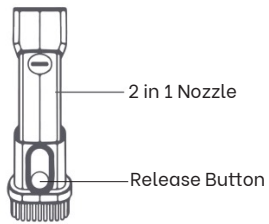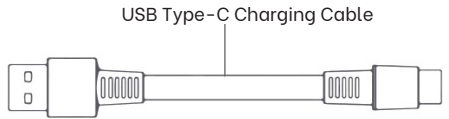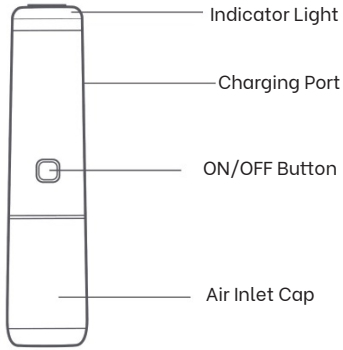

Getting to Know Your HandVac

Congratulations on the purchase of your new HandVac.

Before using your new HandVac, it is important that you read and follow the instructions in this booklet even if you feel you are familiar with this type of appliance. Find a place to keep this booklet handy for future reference. Attention is particularly drawn to the section dealing with "IMPORTANT SAFEGUARDS".

This appliance is designed to be charged via a USB power source. It is not intended for industrial or commercial use.

Precautionary Measures

 
If the airflow is blocked, switch off the appliance immediately. Clear the obstruction completely before attempting to restart the appliance.

1. Do not unplug the charging cable by pulling the cable. Always grip the plug when removing it from the port.
2. Do not attempt to vacuum burning materials, such as cigarette butts, ashes, or embers.
3. Do not vacuum water or any other liquids.
4. Do not vacuum sharp objects or overly heavy items, such as nails, screws, or metal fragments.
5. Do not place or use the appliance near heat sources, such as radiators, stoves, or open flames.

Assembly

- Remove all the packaging materials. Check to make sure that there are no missing accessories.
 - Make sure that all parts are clean and dry before assembling.
 - Power must be disconnected during disassembly.
1. Before using the appliance, ensure the 2-in-1 nozzle is properly installed.
 2. Align the nozzle with the air inlet at the front of the appliance.

3. Insert the nozzle firmly into place until it fits securely.

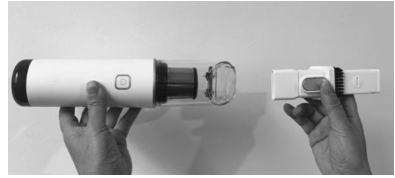

Charging the Battery

1. Fully charge the appliance before assembly and initial use. Ensure the appliance is switched off.
2. Unwind the charging cable. Insert the USB charging connector to the charging port. Allow the cable to hang freely without applying any pulling or tension. And insert the USB connector of the charging cable into a standard DC 5V/1A USB port to start charging.
3. The battery indicator light at the rear of the appliance will pulse while charging and remain steadily lit when fully charged. The charging time is approximately 4-5 hours.

Note: Once all indicator lights are steadily lit, charging is complete—if the USB charging cable is not removed within about one hour after full charge, the lights will turn off.

Note: To ensure optimal performance and battery longevity, please recharge the battery every 2 months if the HandVac is not in regular use.

Operation

1. Ensure the appliance is fully charged before first use.

WARNING: Do not operate the appliance without the filter and 2-in-1 nozzle properly installed.

WARNING: This appliance cannot be operated while charging.

2. Use the ON/OFF button to power the appliance on or off.

Using the 2-in-1 Nozzle

1. To switch to brush mode, press and hold the release button on the nozzle, then slide the brush forward until it clicks into place. The brush will lock in position for dusting.



2. To retract the brush, press the release button again and firmly slide the brush back to its original position.



After use

1. Use the ON/OFF button to turn OFF the appliance.
2. Clean the appliance as needed, close the air inlet cap, and store the appliance on the storage base. The nozzle can also be placed on the base for convenient storage.

Tip: Recharge the battery so it's ready for the next use.

Care and Cleaning

Note:

- Always ensure the appliance is switched off and the USB charging cable is disconnected before cleaning or performing maintenance.
- Never immerse the appliance or the charging cable in water or other liquids.

Cleaning the dust bin

1. To remove the dust bin cup, hold it by the base and rotate it counter-clockwise following the arrow direction. To reinstall, align it properly and rotate clockwise until securely in place.
2. After removing the dust bin cup, turn it upside down over a waste bin to empty it. Gently tap or shake the dust bin cup to release any remaining debris.



Cleaning the filters

1. Clean the HEPA filter when it appears dirty or after approximately 100 hours of use, depending on your cleaning frequency and environment. If the filter becomes clogged with dust, it should be cleaned or replaced promptly.
2. Remove the dust bin cup by twisting it counter-clockwise. This will expose the stainless steel filter, which is mounted to the appliance.



3. Remove the stainless steel filter by twisting it counter-clockwise. Then pull the HEPA filter straight down out of the stainless steel housing. After cleaning, simply reinsert the HEPA filter vertically and twist the stainless steel filter back clockwise to secure it.



4. Rinse the filters under running water and allow them to dry completely in a well-ventilated area.

Note: Do not use detergents to clean the filters.

5. Allow the filters to dry completely in open air before reinstalling.

Note: Do not use any heat sources (such as a hair dryer or heater) to dry the filters. Ensure the filters are completely air-dried before reinstalling them into the appliance.

6. Align the filters and dust bin cup with the corresponding markings, then twist them clockwise to secure in place.

Cleaning the exterior

1. Do not clean the exterior of the appliance with petrol-based or abrasive liquids.
2. Do not immerse the appliance in water.
3. Wipe the exterior with a soft cloth dampened with water and mild soap. Do not use a soaking wet cloth. Avoid letting any liquid seep into the main motor unit.

Storage

If you need to store this appliance for a long time, make sure the appliance and the accessories are completely clean and dry before storing. Store the appliance at a dry and cool place away from direct sunlight.

Disposal

This appliance contains a rechargeable battery and must not be disposed of with regular household waste. At the end of its service life, please dispose of the appliance and its battery responsibly and in accordance with local regulations.

Battery Disposal:

The battery must be removed from the appliance before disposal. Discharge the battery by operating the appliance until it no longer powers on. Remove the battery and take it to an authorised battery recycling collection point or chemical waste facility. Do not incinerate or expose the battery to extreme heat.

Specifications

Charging voltage.....DC 5V 1A
Battery7.4 V 2600mAh Lithium-ion Battery
Charging time.....Approx 4-5 Hours

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

Notes

Warranty Conditions for purchase in Australia & New Zealand

Any claim under this warranty must be made within 2 years of the date of purchase of the product. To make a claim under the warranty in Australia, take the product (with proof of purchase) to any Bunnings store (see www.bunnings.com.au in Australia or www.bunnings.co.nz in New Zealand for store locations).

GSM Retail Group bears reasonable, direct, expenses of claiming under the warranty in Australia. You may submit details and proof to a Bunnings store for consideration or contact our service agent below.

This warranty is provided in addition to other rights and remedies you may have under law: our goods come with guarantees which cannot be excluded under the Australian Consumer Law (if purchased in Australia) or the Consumer Guarantees Act 1993 (if purchased in New Zealand). You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The warranty excludes damage resulting from product misuse or product neglect. The warranty covers domestic use only and does not apply to commercial applications.

This warranty is given by GSM Retail Group

ABN: 53007682475

For Warranty and technical queries: 1300 373 199 Aus Or 0800 764 912 NZ

Warranty Exclusions

Damage to the base or diffuser or any part through accident, misuse or negligence.

G | S | M

Gerard Sourcing & Manufacturing

GSM Retail Group

Consumer Service Centre :

Aus: 1300 373 199

NZ: 0800 764 912

GSM Retail Group has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM Retail Group
Mistral is a registered trademark of GSM Retail Group
142-144 Fullarton Road, Rose Park, SA 5067



Cat. No. BVC302
May 2025