

Smooth Ring Colonial Gate Latch



Parts List

1. Ring Pull



2. Latch

3. Guide

4. Keeper

5. Spindle

Screws: 1" x 8g countersunk wood screws with a black steel finish.

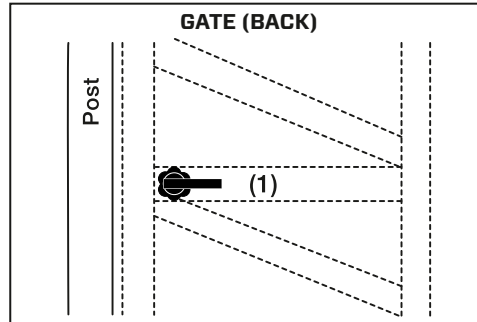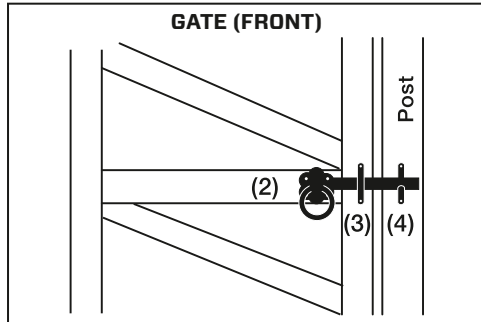

Installation instructions:

Suitable for inward or outward opening, single or double gates.

For single gates:

1. Position Latch (2) on the back of the gate so that the bar extends 25mm past the post (see Diagram 1).
2. Determine position for the Spindle (5) and drill a 15mm hole through the rail of the gate.
3. Attach the Latch (2) using the screws provided and insert the Spindle (5) from the opposite side.

NOTE: If the spindle is too long, measure and cut with a hacksaw.



4. Attach Handle (1).
5. Attach Guide (3) to the edge rail of the gate with the screws provided (Diagram 1).
6. Attach Keeper (4) to the post (Diagram 1).

For double gates:

1. Follow steps 1, 2, 3, 4 and 5.
2. Attach Keeper (4) to the edge of the second gate (see Diagram 2).
3. An extra Ring Pull (1) can be added to the second gate for appearance and to assist in opening the gate.

Additional Information:


- For double gates it is advisable to attach drop bolts on each gate to secure them from opening (Diagram 2).
- For added security, attach a padbolt at the top of the gate and secure it with a padlock.

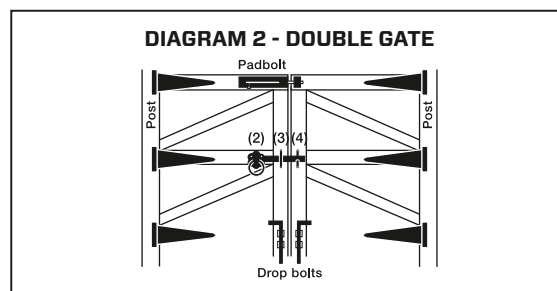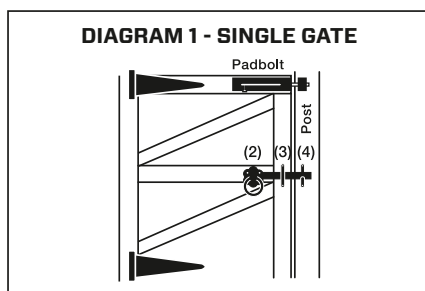

Corrosion Protection Chart

Finish:	Rating:			
Stainless Steel	Ultimate	Shield	Shield	Shield
Galvanised	High	Shield	Shield	
Zinc Plated	Moderate	Shield		

Pinnacle Gate Hardware Range

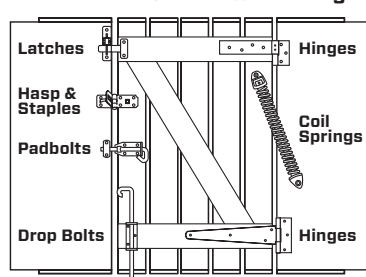

Suitable for model no: GHS046.

CONNECT WITH US!
PINNACLE.NET.AU

