

ROLLTRAK

DOOR & WINDOW SPECIALISTS

FLYSCREEN ALUMINIUM MITRE BOX

Model Number:	Tools required:
RFSR009	Fine toothed hacksaw.

Step 1

Place the frame in the mitre box ensuring the spline channel is facing upwards as per diagram below.


Step 2

Ensuring the spline channel is facing to the inside of the frame.

Step 3

Using a fine toothed hacksaw, cut the through the frame.

Note: For extra control when cutting we recommend fixing this mitre box to a solid surface with the screws provided.

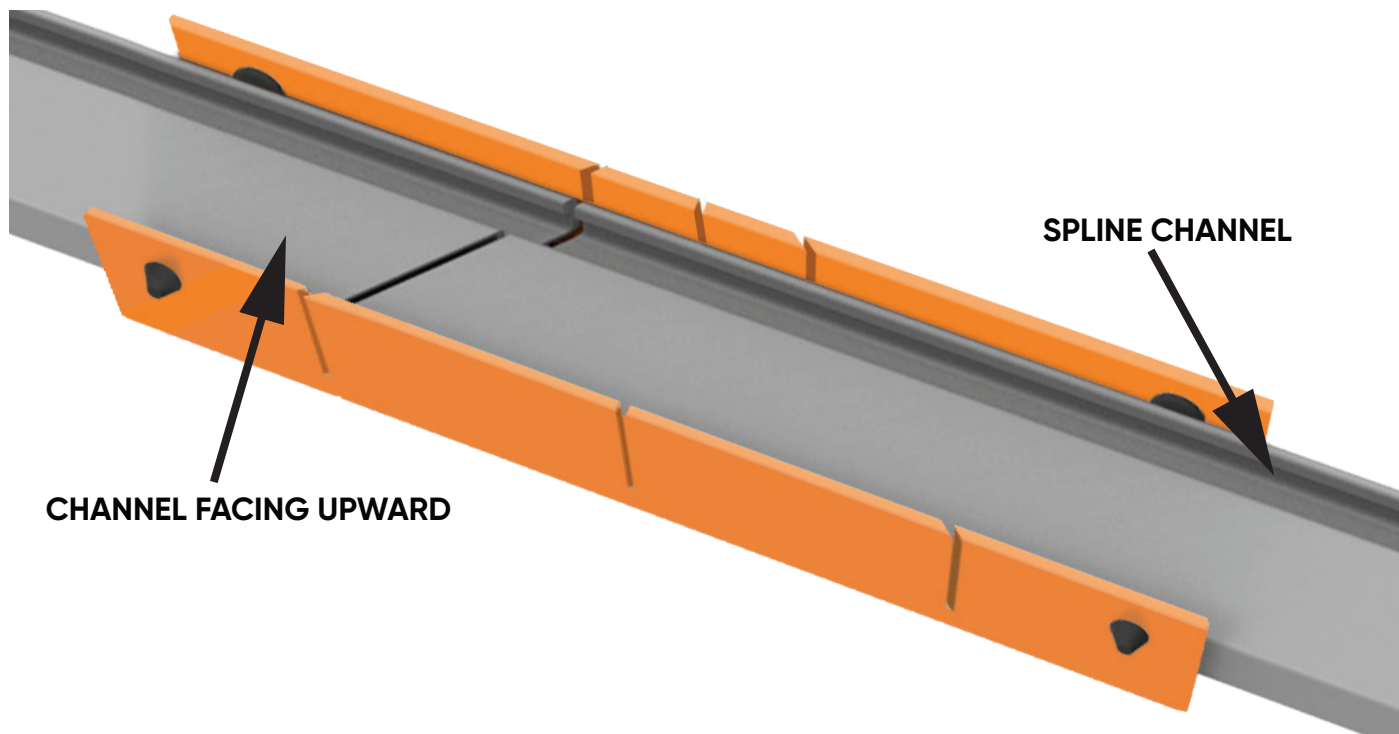

SCAN FOR INSPIRATION
AND HANDY TIPS:



CONNECT WITH US!
ROLLTRAK.COM.AU