



EASY INSTALLATION

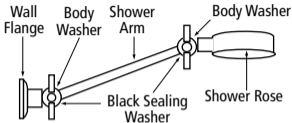

- Turn off water at mains.
- Remove shower arm & shower rose.
- Replace washers, thread seal tape & reassemble shower rose.
- Turn on water supply & inspect for leaks.



For hand showers, insert sealing washers between the wall disc & the hose, & between the hose & the shower head.

SUITS THE FOLLOWING BRANDS

- Auscan
- Flexispray
- Universal
- Irwell
- Dorf
- Caroma
- Brasshards
- Interbath
- Des
- Dunnings
- Shower King

FIX-A-TAP®
AUSTRALIA PTY LTD

The Ultimate Plumbing Solution

PO Box 200 Wahroonga

NSW Australia 2076

Made in China ©2024

www.fixatap.com.au

#209603

See over for
installation
instructions