

# ROLLTRAK

DOOR & WINDOW SPECIALISTS


## WALL MOUNTED DOOR GUIDE

Model Number:


R90150 & R90155

Tools required:


Drill, tape measure, level, pencil, appropriate drill bit.

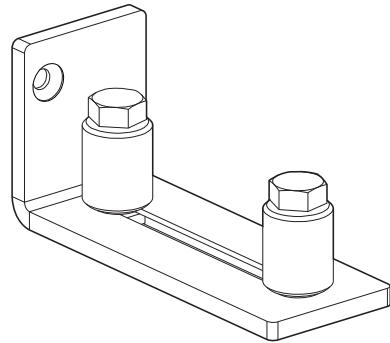

x1

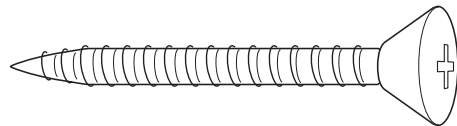

ST4.8 x 32mm x2

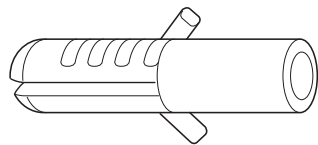

Ø8 x2

