

# ROLLTRAK

**DOOR & WINDOW SPECIALISTS**

## FLYSCREEN SWIVEL CLIP PLASTIC - OFFSET 11MM

Model Number:

R3726, R3726B100 & RFSR015

Tools required:

Phillip head screwdriver.

### Step 1

Place swivel clip on the window frame next to the flyscreen, approx. 100mm from each corner.

### Step 2



A minimum of 4 swivels per flyscreen should be used.

### Step 3

Screw the swivel clip to the window frame using 25mm x 8g self-tappers.

### Step 4

Rotate the swivel clips to remove the flyscreen.

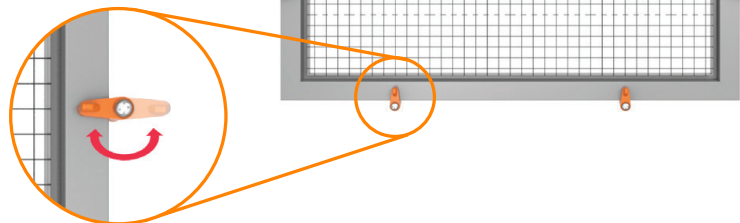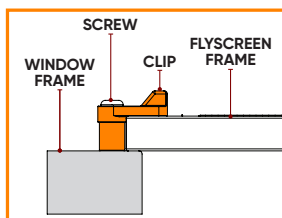

**SCAN FOR INSPIRATION  
AND HANDY TIPS:**



**CONNECT WITH US!  
ROLLTRAK.COM.AU**