


# Drawer Runner

## 295mm Knock In

### White 1 Pair


Item No: 18238

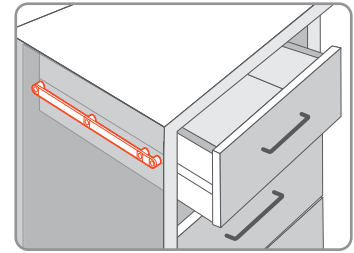

## Instructions

1. When calculating the size of your drawer, allow a 4mm gap on either side of the drawer or 8mm overall so the drawer will slide freely once installed. Ensure that the runners are shorter than the length of the drawer and carcass.
2. Mark the centrepoint of the drawer by measuring from top to bottom and taking the centre measurement, do this at either end of the drawer, then draw a straight line between the 2. This will be the centre of your channel that you will router out.
3. You will need a router with a 10mm bit, route the side of the drawer between 7 and 7.5mm deep following your pre marked line. Repeat on the other side of the drawer.
4. Position your runners on the cupboard carcass matching it with the drawer side you have just routed. Mark and drill holes for the runners to be tapped into by lightly tapping the runner with a mallet or hammer against the cupboard carcass.
5. Using a 7mm drill bit, make your holes, you can then tap the runners into place ensuring that the 2 holes close together on the runner are at the front of the drawer.
6. Fit your drawer into place.

### Mirrored Installation Detail Either Side Of Drawer

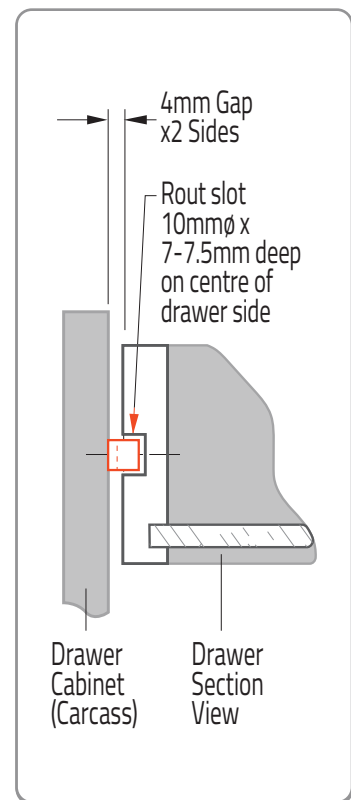

**This end with 2 knock-in pins is positioned at front of drawer**

