


Drawer Runner

300mm Screw In

White 1 Pair


Item No: 17835

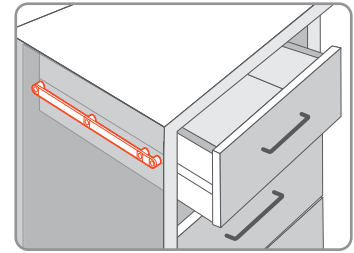

Instructions

1. When calculating the size of your drawer, allow a 4mm gap on either side of the drawer or 8mm overall so the drawer will slide freely once installed. Ensure that the runners are shorter than the length of the drawer and carcass.
2. Mark the centrepoint of the drawer by measuring from top to bottom and taking the centre measurement, do this at either end of the drawer, then draw a straight line between the 2. This will be the centre of your channel that you will router out.
3. You will need a router with an 18mm bit, route the side of the drawer between 7-7.5mm deep. Repeat on both sides of the drawer.
4. Position your runners on the cupboard carcass matching it with the drawer sides you have just routed, you can now screw the runner into the cupboard carcass.
5. Double check you have the 2 screw holes close together at the front of the drawer.
6. Fit your drawer into place.

Mirrored Installation Detail Either Side Of Drawer

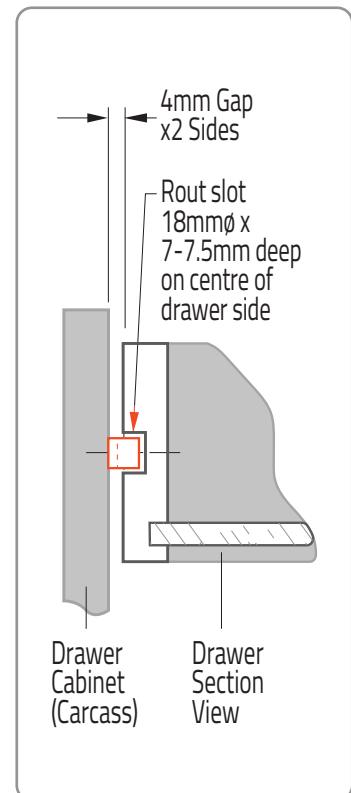

This end with 2 screw holes is positioned at front of drawer

