

WINDOW FILM


Installation Instructions




ATTENTION

This product is for internal use only on flat glass.
 Do not install inside showers, on hot glass or under 10°C.
 Not to be used on double glazed windows or as automotive film.

You'll Need

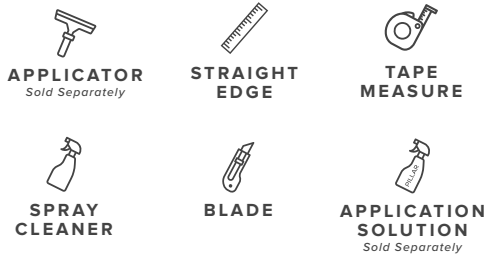


STEP ONE - CLEAN

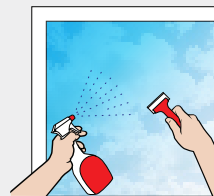


Thoroughly clean glass to remove all dirt and debris using an ammonia-free cleaner, scraper & lint-free cloth.

STEP TWO - MEASURE

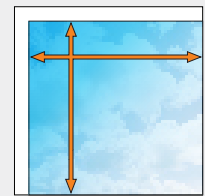


Measure width and height of glass area to cover using a metal tape measure for accuracy.

STEP THREE - CUT

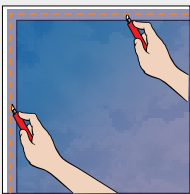


On a clean flat surface, cut window film 20-25mm wider than required along all sides to ensure coverage.

STEP FOUR - PREPARE

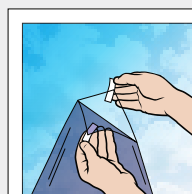


Peel away backing by placing a small piece of masking tape front and back on one corner of film and separate.

STEP FIVE - APPLICATION

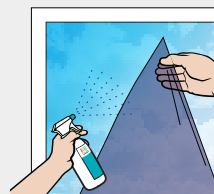


Apply a generous amount of Application Solution to glass and BOTH sides of window film to allow for easy installation.

STEP SIX - INSTALL

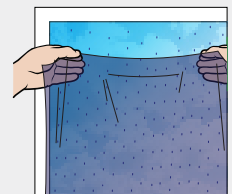


Place adhesive/static side of film against glass and gently manoeuvre film into position. Smooth out bubbles by hand.

STEP SEVEN - INSTALL

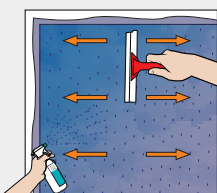


For extra lubrication, spray more Application Solution. Starting from top-centre, use Applicator Tool to work out bubbles to edges and squeegee out excess Application Solution.

STEP EIGHT - TRIM

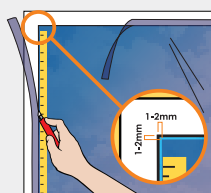

Using a Straight Edge, trim excess film leaving a 1-2mm gap for any water residue to escape.

STEP NINE - FINAL CLEAN

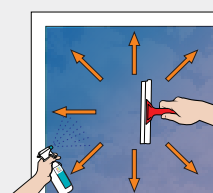

Lightly spray with more Application Solution and work out any remaining bubbles. Use cloth to capture excess moisture.