

WINDOW FILM

Installation Instructions



You'll Need



APPLICATOR
Sold Separately



**STRAIGHT
EDGE**



**TAPE
MEASURE**



**SPRAY
CLEANER**




BLADE




**APPLICATION
SOLUTION**
Sold Separately

STEP ONE - CLEAN

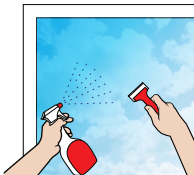


Thoroughly clean glass to remove all dirt and debris using an ammonia-free cleaner, scraper & lint-free cloth.

STEP TWO - MEASURE

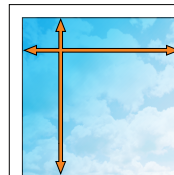


Measure width and height of glass area to cover using a metal tape measure for accuracy.

STEP THREE - CUT

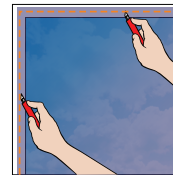


On a clean flat surface, cut window film 20-25mm wider than required along all sides to ensure coverage.

STEP FOUR - PREPARE

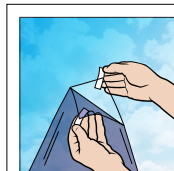


Peel away backing by placing a small piece of masking tape front and back on one corner of film and separate.

STEP FIVE - APPLICATION

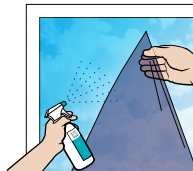

Apply a generous amount of Application Solution to glass and BOTH sides of window film to allow for easy installation.

STEP SIX - INSTALL

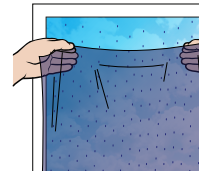


Place film against glass and gently manoeuvre film into position. Smooth out bubbles by hand.

ATTENTION


This product is for internal use only on flat glass.
Do not install inside showers, on hot glass or under 10°C.
Not to be used on double glazed windows or as automotive film.

STEP SEVEN - INSTALL

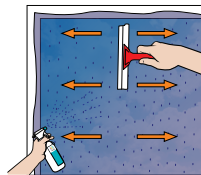


For extra lubrication spray more Application Solution. Starting from top-centre, use Applicator Tool to work out bubbles to edges.

STEP EIGHT - TRIM

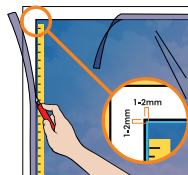

Using a Straight Edge, trim excess film leaving a 1-2mm gap for any water residue to escape.

STEP NINE - FINAL CLEAN

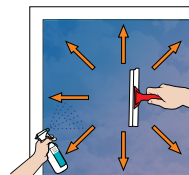

Lightly spray with more Application Solution and work out any remaining bubbles. Use cloth to capture excess moisture.



WARRANTY

To register your purchase for our warranty, scan QR code and complete the steps.

For any other issue please contact the Bunnings store of purchase.