

# ROLLTRAK

DOOR & WINDOW SPECIALISTS

## FLYSCREEN SPRING CLIP

Model Number:

RFSR011

### Step 1

Two springs should be assembled at the top and bottom of one vertical side of the frame.

### Step 2


Fully assemble a corner stake into one side of the horizontal frame.

### Step 3

Rest the spring's base against the vertical edge of the corner stake & slide the vertical frame over the spring base until the 2 frames meet.

### Step 4

Install the screen into the frame from the spring side first.

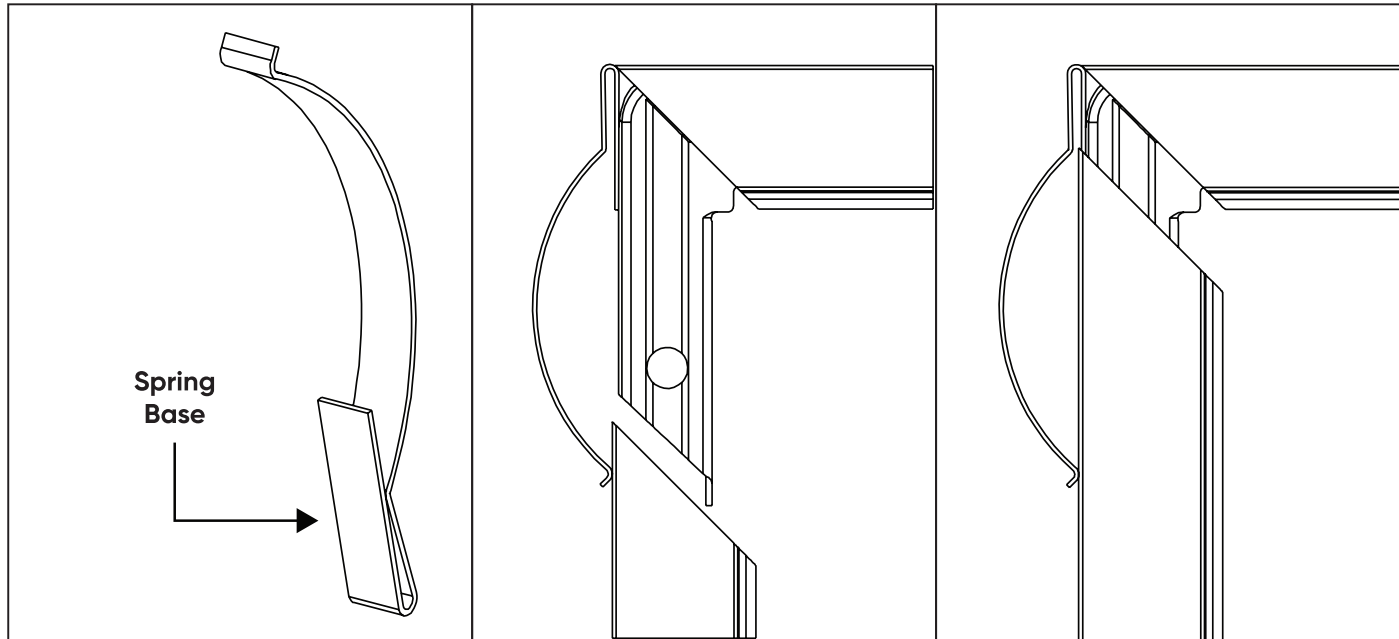

SCAN FOR INSPIRATION  
AND HANDY TIPS:



CONNECT WITH US!  
[ROLLTRAK.COM.AU](http://ROLLTRAK.COM.AU)